

INSTALLATION INSTRUCTIONS




Window Trim Kit

for WTK37 and WTK37H (WITH HEADER)



1 WINDOW TRIM KIT INCLUDES

- A** 1 ea 36" long sill piece (92° for drain-off) radii on left end
- B** 2 ea 36" long side piece (90°)
- C** 2 ea top trim pieces (not included with header kit)
- D** 1 ea tube of power grab construction adhesive
- E** 1 ea tube of white 100% silicone
- F** (OPTIONAL HEADER) 1 ea 36" long sill piece (90°)
- G** (WITH HEADER ONLY) 4 ea #8 x 1-1/2" header mounting screws

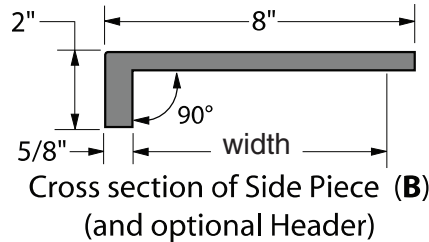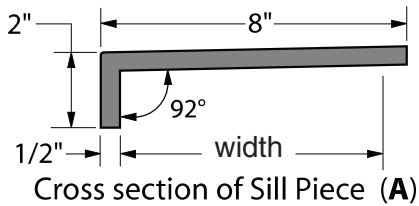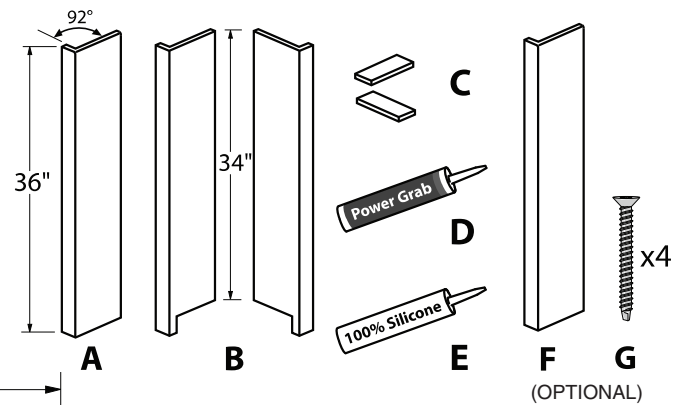

WINDOW TRIM INSTALLATION

- 1** Cut side pieces (B) to length and width and install with power grab. Brace or tape as needed until the power grab hardens.

Cut with a jig saw or bi-metal blade.

- 2** Cut sill pieces (A) to length and width (cut slightly narrower than side pieces) and install TIPPED FORWARD approx. 2 degrees or 1/16" - 1/8" for water run-off.

- 2b** Optional Header (F) must be placed in-between side pieces (B).

- 3** Cut top trim pieces (C) to fit and install.

- 4** Caulk all joints and corners.

Material:
1/2" thick cast polyester with matching gelcoat finish

