

INSTALLATION INSTRUCTIONS


Window Trim Kit

for WTK73 and WTK73H (WITH HEADER)



1 WINDOW TRIM KIT INCLUDES

- A** 2 ea 36" long sill piece (92° for drain-off) radii on left end
- B** 2 ea 36" long side piece (90°)
- C** 2 ea top trim pieces (not included with header kit)
- D** 1 ea tube of power grab construction adhesive
- E** 1 ea tube of white 100% silicone
- F** (OPTIONAL HEADER) 2 ea 36" long sill piece (90°) radii on left end
- G** (WITH HEADER ONLY) 4 ea #8 x 1-1/2" header mounting screws
- H** (WITH HEADER ONLY) 4 ea #8 x 1/2" header connecting strip

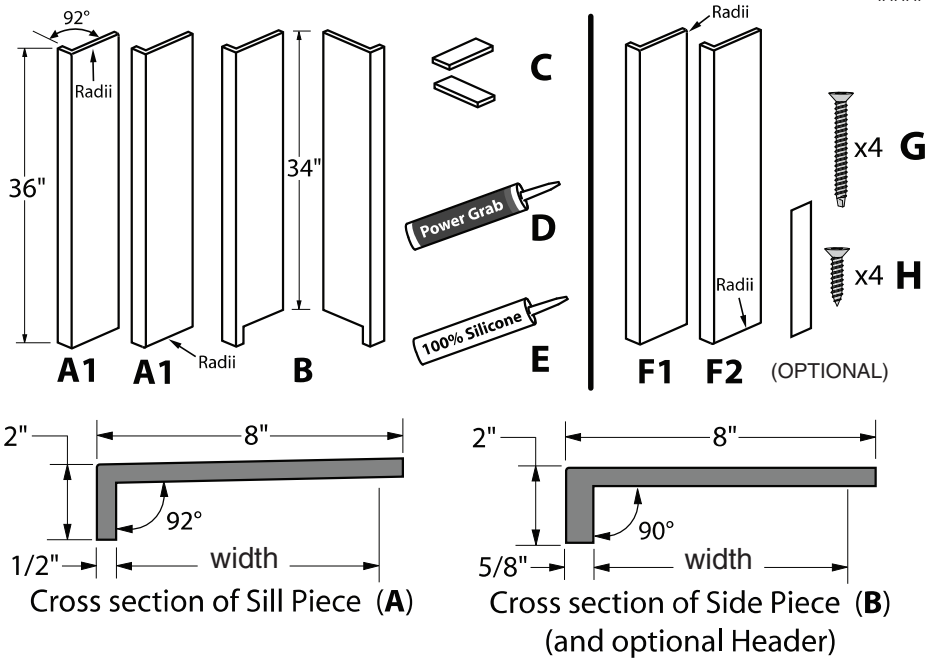

WINDOW TRIM INSTALLATION

- 1** Cut side pieces (B) to length and width and install with power grab. Brace or tape as needed until the power grab hardens.
Cut with a jig saw or bi-metal blade.
- 2** Cut still pieces (A) to length and width (cut slightly narrower than side pieces) and install TIPPED FORWARD approx. 2 degrees or 1/16" -1/8" for water run-off.
- 2b** Optional Header (F) must be placed in-between side pieces (B).
- 3** Cut top trim pieces (C) to fit and install.
- 4** Caulk all joints and corners.
Material: 1/2" thick cast polyester with matching gelcoat finish

